




INSTALLATION INSTRUCTIONS

<p>Accessory</p> <p>FRONT UNDER SPOILER</p> <p>P/N 08F01-SVA-101</p>	<p>Application</p> <p>2006-2008 CIVIC</p> <p>2-DOOR</p>	<p>Publications No.</p> <p>All 37691</p>
		<p>Issue Date</p> <p>AUG 2007</p>

PARTS LIST

Front under spoiler

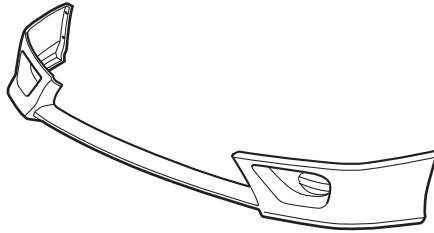

7 Flange bolts



7 Flange nuts




4 Self-tapping screws



4 Spring nuts



Spacer

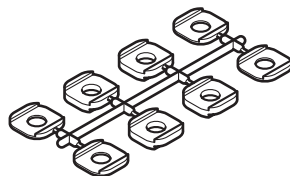

TOOLS REQUIRED

- Phillips screwdriver
- Flat-tip screwdriver
- Drill
- 3 mm and 10 mm Drill bits
- Clip remover
- Pushpin
- Blanket
- Masking tape
- Isopropyl alcohol
- Shop towel
- Eye protection

INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

NOTE:

- Using isopropyl alcohol on a shop towel, thoroughly clean the area where the front under spoiler will be attached.
- Be careful not to damage the front bumper and body paint finish.
- This front under spoiler kit should be installed only if the ambient air temperature is 60°F (15°C) or above.
- To allow the adhesive to “cure,” do not wash the vehicle for 24 hours.

